

93/95/97 SCOPEMETER



Quick Operating Guide

revised: 930104

Philips: 4822 872 00519

Fluke: 916127




0 2 0 4


97



95

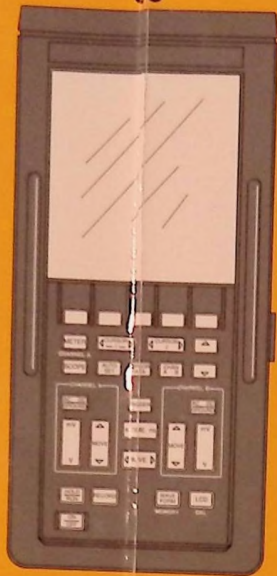

93

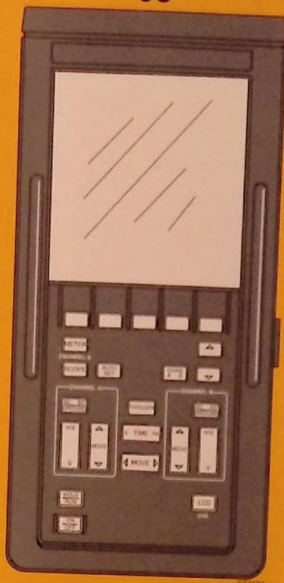


CONTENTS:

Figure	Subject
1.	LF / HF CONNECTIONS
2.	COMMON (GROUND) CONNECTIONS
3.	MEASURING AC-RMS VOLTS
4.	MEASURING DC VOLTS
5.	ACCESSORY INPUT
6.	DIODE TEST
7.	MEASURING RESISTANCE
8.	MEASURING FREQUENCY
9.	METER RECORD MODE
10.	COMPONENT TESTING
11.	DISPLAYING A WAVEFORM
12.	DISPLAYING TWO WAVEFORMS
13.	ZOOM IN A WAVEFORM
14.	TIME BASE POSITIONS
15.	SELECTING A TRIGGER
16.	SINGLE SHOT CHECKLIST
17.	USING CURSORS
18.	SAVE & RECALL SETUP
19.	SAVE A WAVEFORM
20.	DISPLAY A WAVEFORM
21.	MENU KEY ROAD MAP I
22.	MENU KEY ROAD MAP II
23.	HARD COPY




LF/HF CONNECTIONS

LF MEASUREMENT (DC to 1MHz)

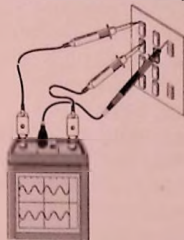

HF MEASUREMENT (DC to 50 MHz)

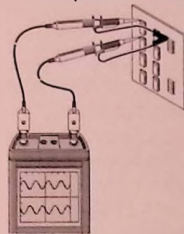


93


95

97

COMMON (GND) CONNECTIONS 2

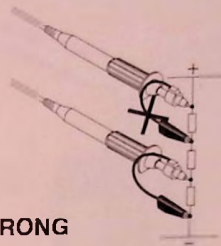

WRONG


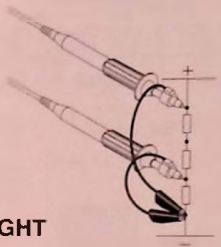


RIGHT


93

95

97

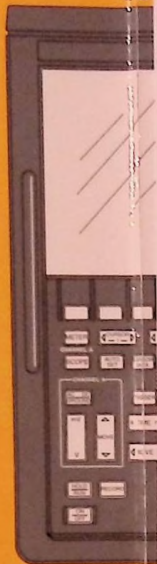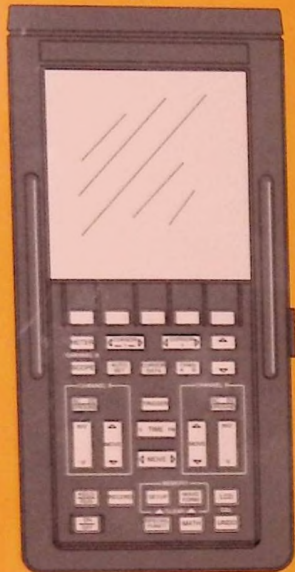

3 MEASURING AC-RMS VOLTS

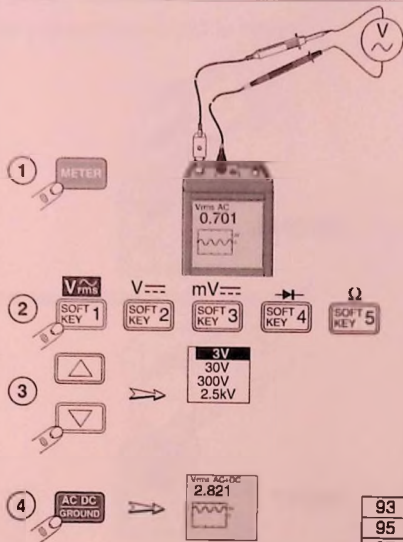


93

95

97

MEASURING DC VOLTS

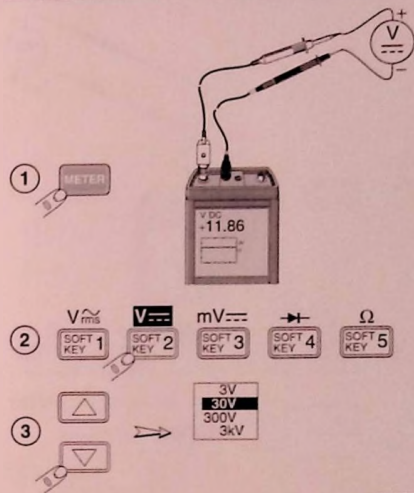


93

95

97

97

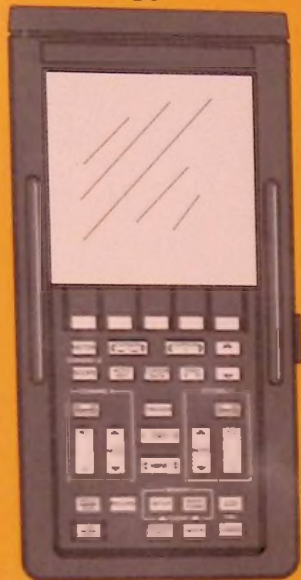

95



5 ACCESSORY INPUT

① METER

② V_{rms} SOFT KEY 1 V_{DC} SOFT KEY 2 **mV** SOFT KEY 3 \rightarrow SOFT KEY 4 Ω SOFT KEY 5

③ Δ ∇ \rightarrow **3V**

93
95
97

DIODE TEST

6


① METER

② V_{rms} SOFT KEY 1 V_{DC} SOFT KEY 2 **mV** SOFT KEY 3 \rightarrow SOFT KEY 4 Ω SOFT KEY 5


DIODE TEST WITH AUDIO ALERT:

③ ALERT COM \rightarrow COM

93
95
97

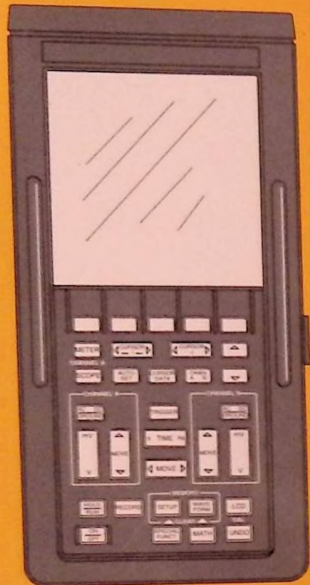


7 MEASURING RESISTANCE

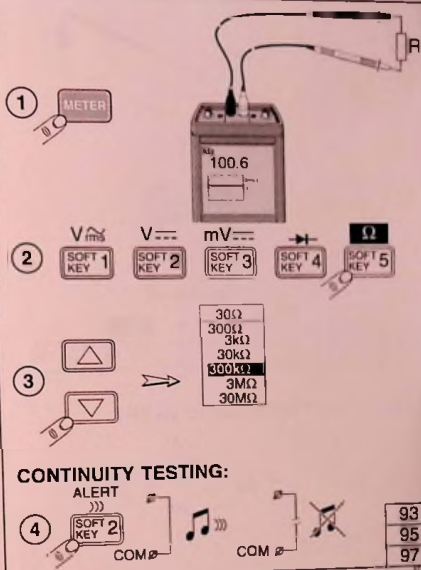


93
95
97




8 MEASURING FREQUENCY

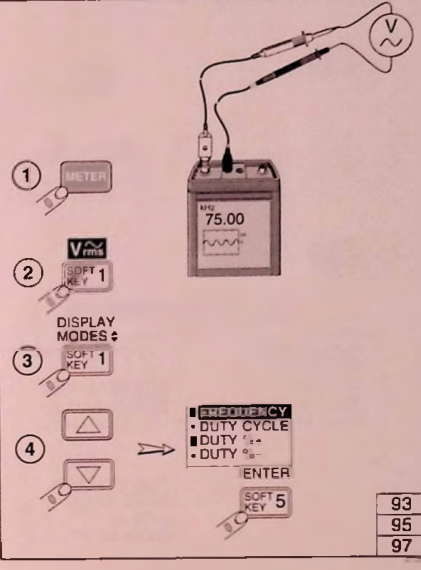

93
95
97

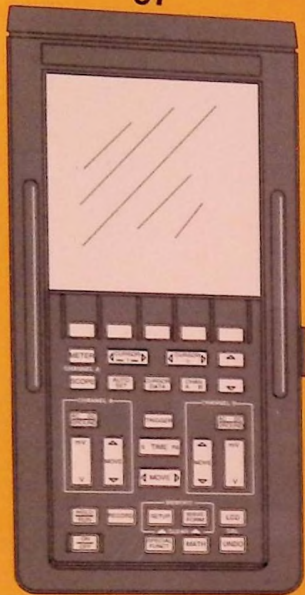

METER RECORD MODE

   

Vrms AC
29.63 NOW
 32.45 MAX 000h 00:58
 29.23 AVG 000h 00:31
 26.44 MIN 000h 00:17

ATTENTION!

Vrms AC
27.50 NOW
~~OL~~ MAX 000h 00:58
~~32.26~~ AVG 000h 00:31
 26.44 MIN 000h 00:17


 
 
 
Average value:
 32.26 Vrms
 valid at
 000hr 00:57

93


95

97

COMPONENT TESTING

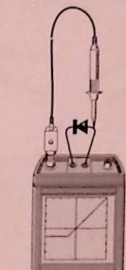

Components:
VOLTAGE
 • CURRENT
 ENTER
 SOFT KEY 5

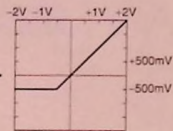


93

95


97




11 DISPLAYING A WAVEFORM

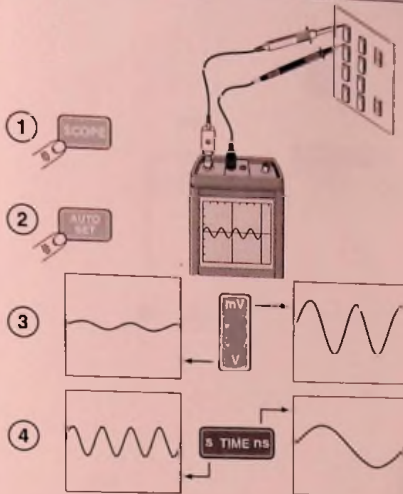

DISPLAYING TWO WAVEFORMS 12

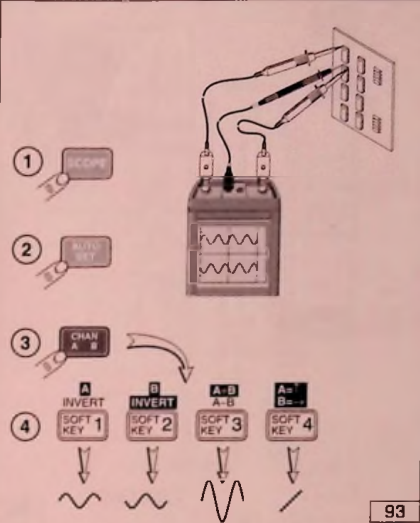

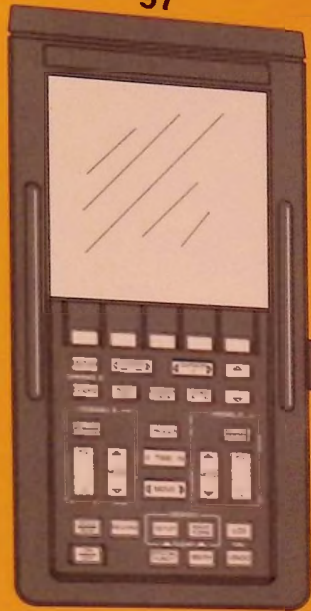

i3 ZOOM IN A WAVEFORM

- 1 →
- 2 →
- 3 →
- 4 →
- 5 →
- 6 ETC.. (4) + (5)

~~93~~
95
97

TIME BASE POSITIONS 14

- 1 →
- 2 →

ROLL

SINGLE /div


RECURRENT

MIN MAX on A

93

93
95
97

SELECTING A TRIGGER

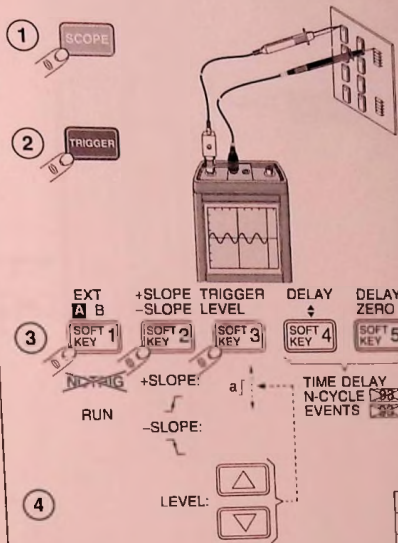

SINGLE SHOT CHECKLIST

- SCOPE

SINGLE RECURRENT	FREE RUN	CAPTURE 10 20	MIN MAX TRIGGER on A at 50%
Set to SINGLE	Set to off	Set as needed	Set as needed
- CHAN A B

A INVERT	B INVERT	A+B A-B	A-B B-
Set as needed	Set as needed	Set as needed	Set as needed
- A mV or B mV

Set to cover input signal(s)
- AC DC GROUND or AC DC GROUND


Set to DC
- TRIGGER

EXT A B	+SLOPE -SLOPE	TRIGGER LEVEL	DELAY DELAY ZERO
Set as needed	Set for 1st edge	Press and Adjust with Δ and ∇	Press and Adjust in Pop up
- TIME RES


Set as needed
- HOLD RUN

Press to start (or stop) HOLD on display changes to NOTRIG On triggering to RUN On completion to HOLD

Notes : MIN MAX affects channel choices
: Models 93 and 95 have fewer softkey choices
: If GEN on then EXT trigger replaced by GEN

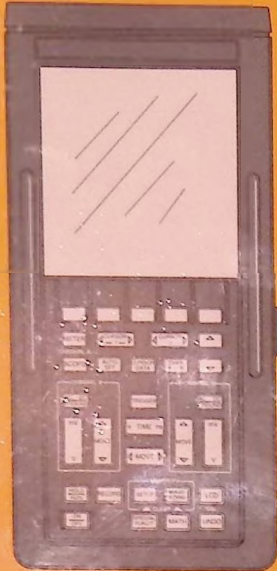


USING CURSORS

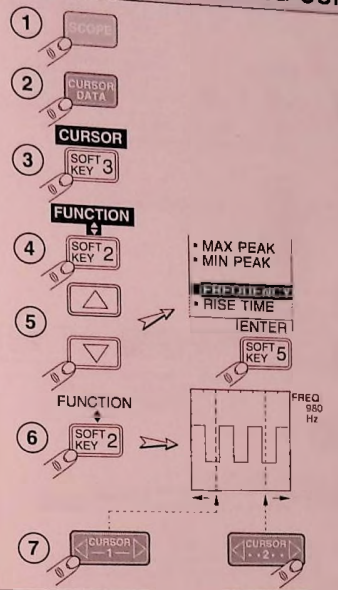



SAVE & RECALL SETUP

SAVING:

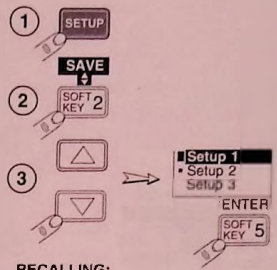


RECALLING:

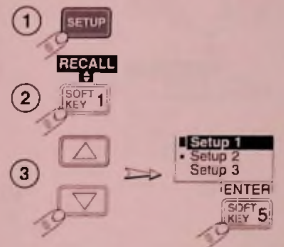


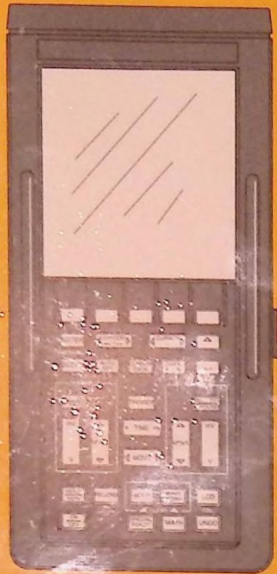

SAVE A WAVEFORM

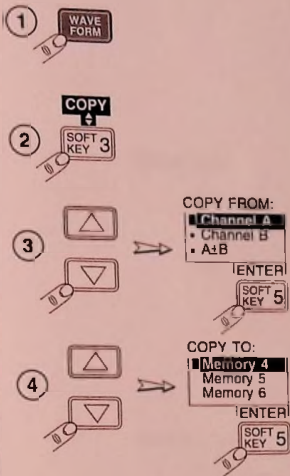

DISPLAY A WAVEFORM

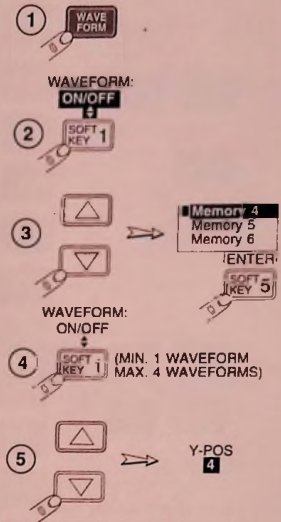


97



95




21 MENU KEY ROAD MAP

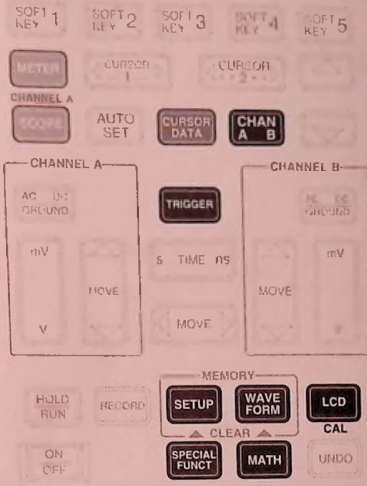


MODEL 97

Note: Models 93 and 95 have fewer key choices

MENU KEY ROAD MAP 22

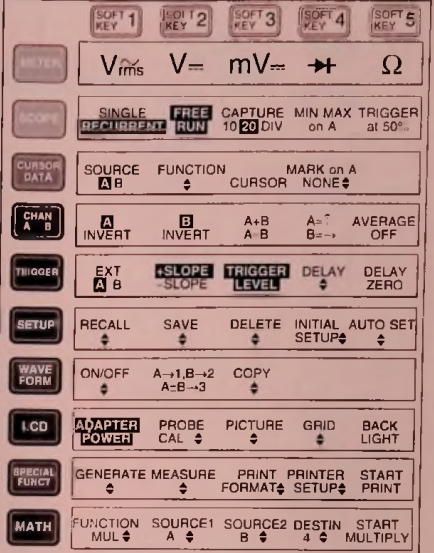

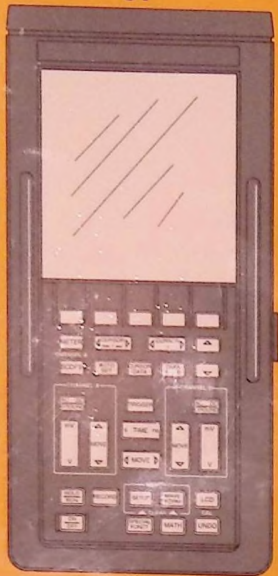

HARD COPY

